

ELEVATOR SYSTEMS INC.

465 ENDO BLVD GARDEN CITY , NY 11530
(516) 239-4044 Fax: (516) 239-5793

JACK SYNCHRONIZE OPERATION

- **PARA [75] = JACK SYNCRONIZE HOUR**
 - Can be set to 0, 1 → 24
 - If PARA [75] = 0 No Jack Synchronize Operation will occur.
- **PARA [76] = JACK SYNCRONIZE DAY**
 - Can be set to 0, 1 → 8
 - PARA[76] = 0 No Jack Synchronize Operation will occur
 - PARA[76] = 1 sync on Sunday
 - PARA[76] = 2 sync on Monday
 - PARA[76] = 3 sync on Tuesday
 - PARA[76] = 4 sync on Wednesday
 - PARA[76] = 5 sync on Thursday
 - PARA[76] = 6 sync on Friday
 - PARA[76] = 7 sync on Saturday
 - PARA[76] = 8 sync on EVERYDAY
- **PARA [73] = JACK SYNCRONIZE Dewell Time**
 - Can be set to 30 - 600 seconds
- If PARA [75] = 1 → 24, The car will perform Jack Synchronize operation at the start of the hour specified by PARA [75] and on the day of the week specified by PARA [76]

If car is on automatic, it will home park to the bottom floor. The car will then wait 10 seconds. After this delay, the JSP Jack Synchronize Output will turn on relay JS, which will jump out the bottom normal limit. The car will then run down at leveling speed for Para[73], JackSync Dewell Time. During this time the car will land and Sync the Jacks. After this delay, the car will level back up to the bottom floor.