

**Test Procedure:**      **Traction Loss Test**  
**Version:**              **v1.01**  
**Date:**                  **August 5, 2020**

---

**The following is the procedure to test the Traction Loss:**

***Note: Parameter [50] - Traction Loss Duration Time (Unit: Second, Min: 3, Max: 99)***

---

1. Set Parameter [50] = 3.
2. Place a call to next floor.
3. If car can't make it to next floor within 3 seconds (Parameter [50]), the controller should fault out with "**Traction Loss**".
4. Toggle Auto/Insp switch to reset the fault.
5. After the test, set Parameter [50] to 2 times of the floor to floor run time.